

---


# HARLEY-DAVIDSON M8 SOFTAIL BACK FRAME SPOILER 2018-2023

## Mounting instructions


---



1. Check all clearances before, during and after installation.
2. Unscrew two bolts holding the evaporation system as shown on the pictures below. You don't have to disconnect the evaporation system, just put a little bit aside. If your motorcycle doesn't have the evaporation system just skip this step.

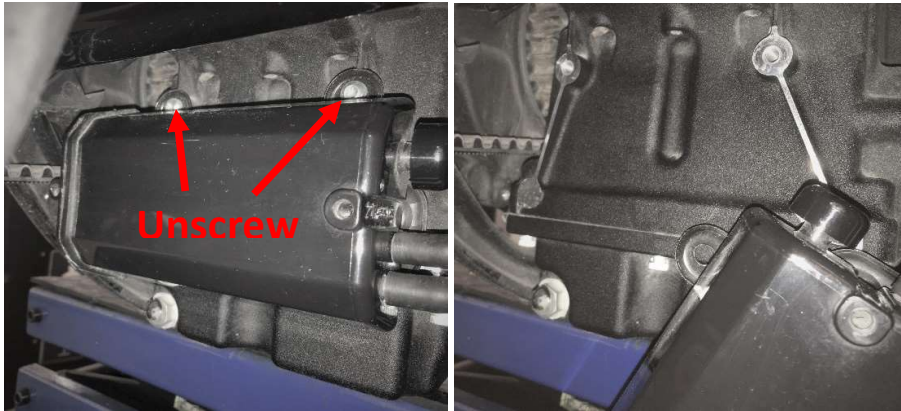

3. Attach the spoiler bracket as shown on the pictures below. The bracket should be underneath the evaporation system reservoir. If your motorcycle doesn't have the evaporation system just attach the bracket using the included bolts. Don't forget to use thread locker glue (not included).

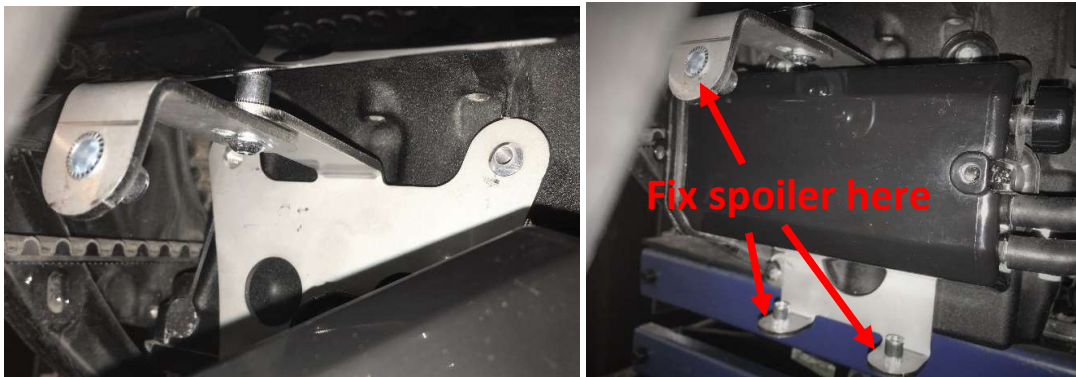

4. Put the Spoiler on the motorcycle. There are two holes on the lower part of the spoiler and one hole in the top. Use these holes to fix spoiler using included M6 bolts and the installation is finished.
5. After the installations make a test drive to be sure everything is working perfectly.

### NOTE:

- Installation of this kit requires detailed knowledge of the motorcycle model and mechanics. It is assumed that the installer has access to the proper tools and a working knowledge of them and factory service manuals.
- Before the painting the parts first you have to put those on the motorcycle and make sure that everything is adjusted and fits perfectly.

**Killer Custom assumes no responsibility or liability for damage or injury of any kind arising out of the use or misuse of any products.**